EchoTouch US06 & US12 ____ FLOWLINE

Reflective Ultrasonic Liquid Level Transmitter



US06

Shown

Application

The intrinsically safe reflective ultrasonic level transmitter provides continuous level measurement up to 39.3' (12m) with a 4-20 mA analog and HART digital signal output, and is configured via its integral push button display module or WebCal software. The non-contact liquid level sensor features our proprietary Reflective Technology™ that delivers reliable level measurement in condensing environments. Select this sensor for bulk tanks with non-foaming or highly vaporous media such as chemicals, water, wastewater and oil. Typical applications include bulk storage, neutralization tank, clarifier and waste sumps.



Features



SCIGATE AUTOMATION (S) PTE No.1 Bukit Batok Street 22 #01-01 Singapore 659592 Tel: (65) 6561 0488 Fax: (65) 6562 0588 Email: sales@scigate.com.sg

Business Hours: Monday - Friday 8.30am - 6.15pm



Reflective Technology™ measures reliably with condensation

Corrosion resistant PVDF transducer with aluminum enclosure

Narrow 3" (7.6cm) beam width for applications with limited space

LCD display indicates level in inches, meters or percent of span

HART communication in point to point and multi-drop modes

Fail-safe diagnostics with selectable fail-safe signal outputs


Configuration via push button display or WebCal software

Automatic temperature compensation from -40° to 80° C.

Reflective Technology[™]

Condensation is the most common variable in liquid level applications. Condensation attenuates the acoustic signal of ultrasonic sensors with horizontal transducers, weakening their signal strength and signal to noise ratio by up to 50%, and substantially reducing their measurement reliability. At the core of Reflective Technology™ is a simple fact. Unlike flat horizontal surfaces, significant water droplets cannot adhere to smooth vertical surfaces. By orienting the transducer vertically, condensation runs off the transducer and does not affect sensor performance. The unimpeded transmit and receive signals are redirected to and from the liquid off a 45° reflector, delivering reliable level measurement. Thanks gravity.




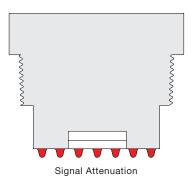

Reflective Transducer

US12

Shown

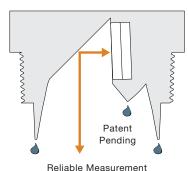

EchoTouch® US06 & US12 ____

Reflective Ultrasonic Liquid Level Transmitter



Specifications

Dead band:

Pressure:

Enclosure rating:

Range: US06: 8" to 19.6' (20cm to 6m)

US12: 18" to 39.3' (45.7cm to 12m)

Accuracy: \pm 0.2% of range Resolution: US06: 0.079" (2mm)

US12: 0.196" (5mm) US06: 8" (20.3cm)

US12: 18" (45.7cm)

Beam width: US06: 3" (7.6cm) US12: 6" (15.2cm)

Configuration: Push button; WebCal® PC Windows®

USB® 2.0; HART 7 (pending)

Memory:Non-volatileDisplay type:LCD, 6-digitDisplay units:Inch, cm or percentSupply voltage:14-28 VDCLoop resistance:500 ohms @ 24 VDC

Loop resistance: 500 onms @ 24 VDC

Signal output: 4-20mA, two-wire, HART 7 (pending)

Signal invert: 4-20mA or 20-4mA

Signal fail-safe: 4mA, 20mA, 21mA, 22mA, hold last

Process temp.: F: -40° to 176°

C: -40° to 80° Automatic

Temp. comp.: Automatic
Ambient temp.: F: -40° to 176°

C: -40° to 80° 30 psi (2 bar) Type 6P (IP68)

Encl. material: Aluminum

Enclosure vent: Water tight membrane

Conduit entrance: 1/2" NPT **Transducer type:** Reflective

Transducer mat.: Polyvinylidene fluoride

Process mount: -0003: 2" NPT -0013: 2" G

Mount gasket: -0003: N/a

-0013: Viton®

Classification: Intrinsically safe

Approvals (pending): Haz Loc: Class I, Div 1, Groups A,


B, C & D; Class II, Groups E, F & G; Class III; Class I, Zone 0, Group IIC,

Zone 20, Group IIC

IECEx: II 1G, EEx ia IIC Gc

Entity parameters: See control drawing #600820


Compliance: CE, RoHS

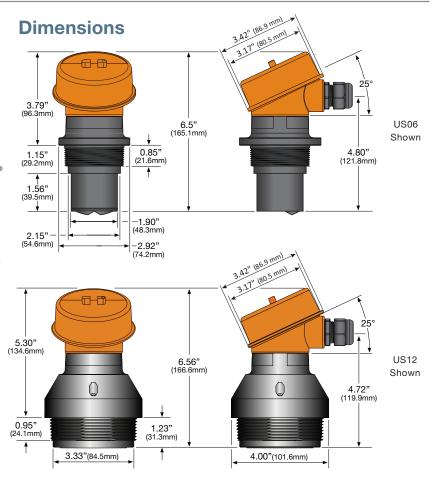

Configuration

In addition to the push button display module, the sensor may be configured via our WebCal software and one Fob USB adapter. WebCal is a PC utility program that allows users to easily configure their sensors, update firmware, save configurations and print wiring schematics prior to installation. WebCal is a free download from our website.



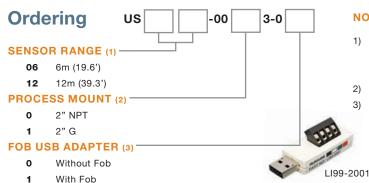

NOTES

- If you want help in selecting a sensor for your application, please go to our website and submit a Level Questionnaire. An engineer will review your requirements and suggest a product solution via email.
- 2) Install the sensor using Flowline installation fittings or equivalents.
 - Sensors are offered with or without a LI99-2001 Fob USB adapter. If you want to configure the sensor using our free WebCal software, you need one Fob, which can then be used with any WebCal compatible ultrasonic or guided wave sensor. WebCal is a free download from our website.